


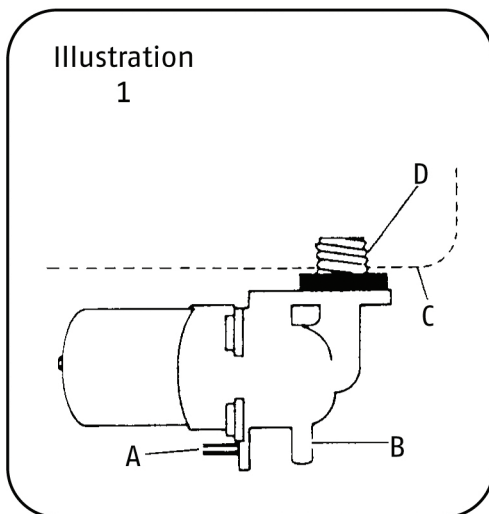

Suggested Installation Instructions for 601-677, 1975-1985 Windshield Washer Pump

1. Disconnect electrical connections (A) Illustration 1.
 2. Disconnect washer pump hose (B) Illustration 1.
 3. Remove reservoir (C) Illustration 1.
 4. Use 7/8" deep socket with extension to remove pump from reservoir, as follows:
 - a. Hold pump securely as in (A) of Illustration 2.
 - b. Insert deep socket through opening and remove pump from filter nut (B) of Illustration 2.
- SAVE AND CLEAN FILTER NUT FOR INSTALLATION**
5. Remove pump.


NOTE: A rubber boot is installed over the washer pump in some PONTIAC FIREBIRDS. Care should be taken so as not to damage this boot.
 6. Flush and clean reservoir.
 7. Install enclosed new rubber seal over threaded pump spout (D) of Illustration 1.
 8. Reassemble pump, reservoir and filter nut.
 9. Fill reservoir—Check for leaks.
 10. Reconnect electrical connections and hose.
 11. Re-install the reservoir on the car.
 12. Fill reservoir—Test operation.



IMPORTANT

For satisfactory operation and extended life, the following steps should be taken:

1. Inspect old hoses, replace cracked or hardened hose(s).
2. Remove and clean old reservoir. Refill with washer solvent or washer anti-freeze.
3. Check nozzles for clogging. Clean with sharp needle to remove sand or grease accumulation.

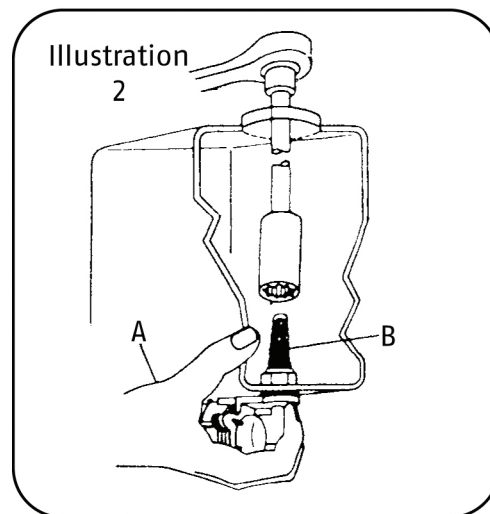

IF YOUR PUMP DOES NOT OPERATE AFTER PROPER INSTALLATION...

1. It may be necessary to activate pump a number of times in order to prime pump.
2. Check electrical connections (A). If corroded, clean with a point file or emery cloth.
3. If pumping does not occur, cycle unit anywhere from 5 or more times to alleviate air locks that may be present due to trapping of air in installation or possible low solution level.