



**Application:** 1968-1982 Corvette

**Part Includes**

1 - Pair of Glass T-Tops

## Glass T-Top



**Tools Needed**



**STEP 1.**

Place roof panels upside down on a soft surface to prevent scratching the glass. Remove the plastic covers on the tongues. There will be 1 Phillips head screw for each cover. Do the same for the latch covers.

**STEP 2.**

Loosen (do not remove) all 7/16" nuts. There are a total of 7 nuts per top, 2 per tongue and three per latch.

**STEP 3.**

Distinguish a mark using tape and a pencil on center of car by measuring from the left and right front locating pin holes to the center of T-Bar above the windshield.

**STEP 4.**

Open the car doors and place T-Tops on car so tongues go into T-Bar, (see View A) and front locating pin on latch assembly goes into hole.

**STEP 5.**

With T-Tops on car, close latches on both tops, watching for rear locating pin to engage in switch plate.

**STEP 6.**

Use center mark as a reference point to align tops. Move the tops side to side until you achieve a parallel position down the center of the T-Tops and across the back.

**STEP 7.**

With T-Tops parallel tighten latch nuts.

**STEP 8.**

Go inside car and tighten tongue nuts. NOTE: adding shim raises top and deleting shims lowers top.

**STEP 9.**

If T-Tops appear unlevel return to the inside of the car and add or delete shims as necessary.

**STEP 10.**

If necessary, loosen latch and readjust tops to compensate for alignment.

**STEP 11.**

Replace all plastic covers to the T-Top panels and return panels to car.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.



## Glass T-Top (cont.)


### NOTICE 1.

The glass roof panels are designed to fit approximately 1/8" higher than the rear roof surface, therefore, do not attempt to adjust the glass panels flush with the roof surface.

### NOTICE 2.


The glass panels should maintain a 1/8-3/16" clearance along front between glass and car.

VIEW A

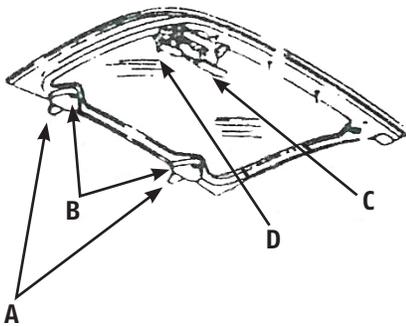

- A - Tongue
- B - Tongue Cover
- C - Latch
- D - Front Locating Pin

VIEW B

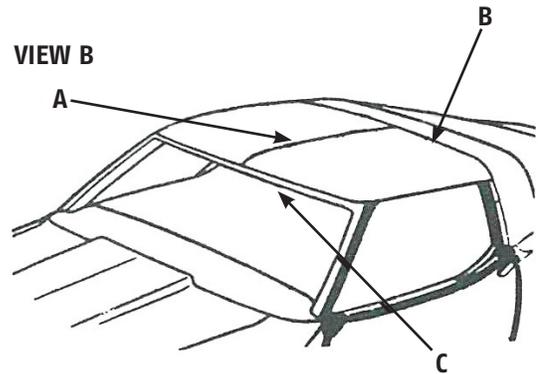

- A - T-Bar
- B - Rear Clearance
- C - Front Clearance