



**Application:** 1997-2004 C5 Corvette

**Part Includes**

1 - RH release lanyard

1- LH release lanyard

# Emergency Hood Release Lanyard



**Tools Needed**



Search: **Hood**  
[www.mamotorworks.com](http://www.mamotorworks.com)

**Drivers side (Left)**

**STEP 1.**

Lift hood of Corvette, remove the bolt (10mm) on the upper right corner of the stock hood latch. (Drivers side)

**STEP 2.**

Remove your Emergency Lanyard from the package, you will find one marked right and one left.

**STEP 3.**


Install the left marked Lanyard and retighten 10mm bolt.

**STEP 4.**

Fish small cable loop end over lower hood release bracket arm; pull snug from the large cable loop end.

**STEP 5.**

Tuck and stow large loop under hood and windshield edge.

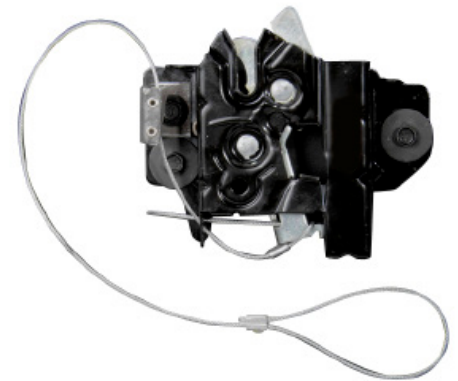

**Passenger Side (Right)**

**STEP 1.**

The right side would require mounting on the upper left latch mounting bolt

**STEP 2.**

Remove the bolt (10mm) on the upper left corner of the stock hood latch. (Passenger side)

**STEP 3.**

Choose the one marked right and install the right marked Lanyard. Retighten the 10mm bolt.

**STEP 4.**

Fish small cable loop end over lower hood release bracket arm; pull snug from the large cable loop end.

**STEP 5.**

Tuck and stow large loop under hood and windshield edge.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

**2900 North Third Street, Effingham, IL 62401**  
**800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800**  
**[www.mamotorworks.com](http://www.mamotorworks.com) • [generalmail@mamotorworks.com](mailto:generalmail@mamotorworks.com)**

©Mid America Motorworks, Inc. All rights reserved.