



Application: 1997-2004 Corvette

Part Includes

- 1 -magnaflow peformance exhaust sytem
- 1- band clamp kit
- 1-Pair of Gaskets

Magnaflow Performance Exhaust



Tools Needed



Search: **Exhaust**
www.mamotorworks.com

Magnaflow Performance Exhaust recommends professional installation on all their products.


WARNING: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

STEP 1.

(Carefully read all instructions before installation.) Disconnect the vehicle's battery before removal of the OEM exhaust. This will allow the computer to reset itself with the new system, and prevent electrical accidents. Begin removal of the OEM system by removing the 4 sway bar mounting bolts at the rear of the transmission. Do not discard these fasteners, as you will need them to re-mount the sway bar. Unbolt the mufflers from the catalytic converter extension pipes at the 2-bolt flanges. Remove the mufflers from the OEM rubber insulators (Removal of the passenger side heat shield will aid in the extraction of the muffler.) Do not damage the OEM rubber insulators, as they will be re-used to mount the new system. Removal of the OEM H-Pipe will be covered in a later step.

STEP 2.

Begin installation by fitting the new mufflers into the OEM rubber insulators and align them with the billet nameplate. Working forward, install the over-axle pipes with the supplied band clamps, and allow them to hang loosely.

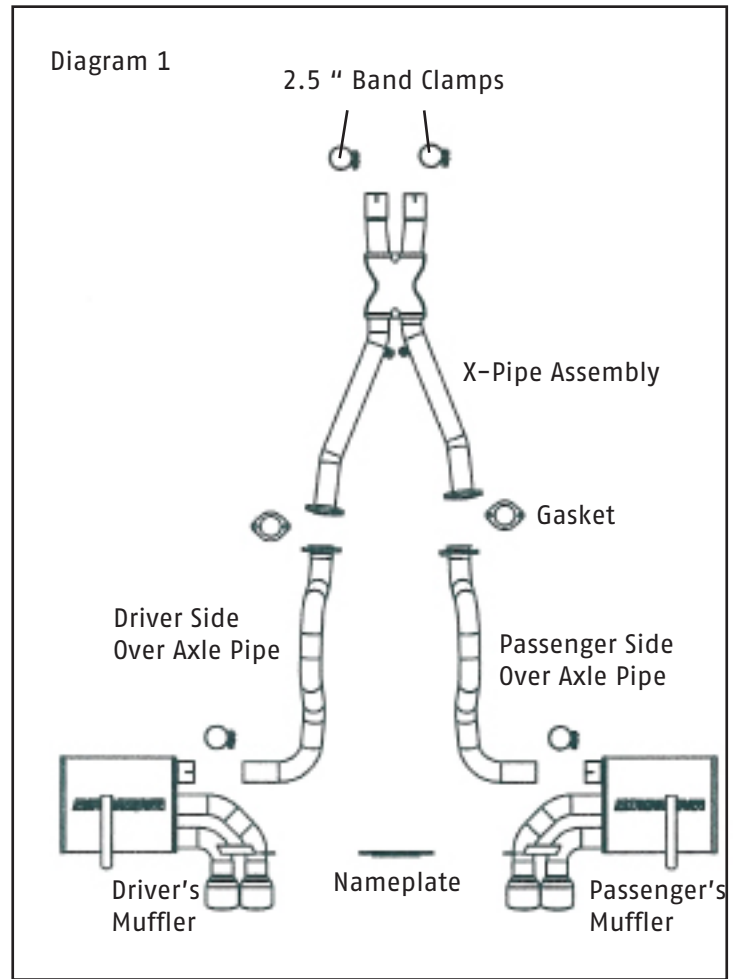

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.



Description (cont.)

Magnaflow Performance Exhaust recommends professional installation on all their products.

WARNING: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

STEP 1.

(Carefully read all instructions before installation.) Disconnect the vehicle's battery before removal of the OEM exhaust. This will allow the computer to reset itself with the new system, and prevent electrical accidents. Begin removal of the OEM system by removing the 4 sway bar mounting bolts at the rear of the transmission. Do not discard these fasteners, as you will need them to re-mount the sway bar. Unbolt the mufflers from the catalytic converter extension pipes at the 2-bolt flanges. Remove the mufflers from the OEM rubber insulators (Removal of the passenger side heat shield will aid in the extraction of the muffler.) Do not damage the OEM rubber insulators, as they will be re-used to mount the new system. Removal of the OEM H-Pipe will be covered in a later step.

STEP 2.

Begin installation by fitting the new mufflers into the OEM rubber insulators and align them with the billet nameplate. Working forward, install the over-axle pipes with the supplied band clamps, and allow them to hang loosely.