



**Application:** 1984-1989 Corvette

# Console Cushion, Single Color with C4 Logo

**Part Includes**

- 1 - Console Cushion
- 1 - Two-sided Tape Kit



**Tools Needed**



Search: *Dash & Center Console*  
[www.mamotorworks.com](http://www.mamotorworks.com)

**INSTALLATION**

**STEP 1.**

With console lid open, remove the 5 screws that secure the console lid to the hinge (Illustration A).

**STEP 2.**

Next, unhook the connector for the console light. Follow the 2 wires to where they enter the console compartment, there is a small plastic cover that conceals the connector. Cover removes by squeezing the sides and pulling upward. Pull the connector up and out. Use the small flat screwdriver to press the locking hook of the connector down and pull it apart (Illustration B).

**STEP 3.**

With the console lid laying face down, remove the 7 screws that hold the backing plate in place (Illustration C). **DO NOT REMOVE THE 2 SCREWS THAT HOLD IN THE LIGHT.** Pay close attention to how the latch/spring works for reassembly. Set the backing plate aside.

**STEP 4.**



With your new Console Cushion laying face down, place the console lid face down on top (Illustration D). Cut the two-sided tape in lengths to fit in the locations shown. Remove one side of the protective covering and adhere to the back of the lid (Illustration D). The tape in the front adheres to the rolled under part of the vinyl that covers your lid. Pull the other side of the protective covering off.

**STEP 5.**

Make sure the Console Cushion is lined up under the lid. Pull the securing flaps around the back of the lid and stick to the adhesive tape as shown in (Illustration E). (Note the close-up in (Illustration F), showing how the tape holds the flaps). The purpose of the two-sided tape is to temporarily hold the flaps until the backing plate of the console lid gets reinstalled. You can read-just the flaps, to make sure the Console Cushion is firmly secured to the lid.



**FINAL PRODUCT**

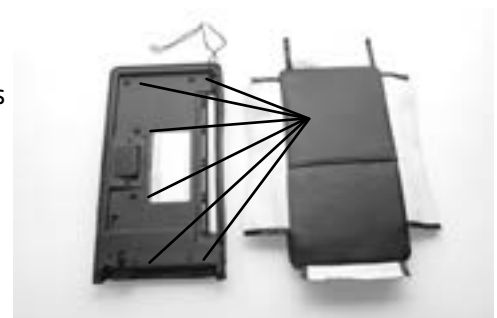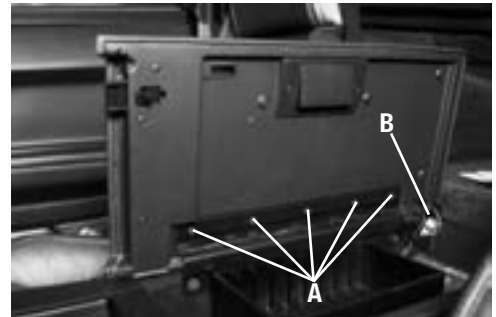

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

**2900 North Third Street, Effingham, IL 62401**  
**800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800**  
**[www.mamotorworks.com](http://www.mamotorworks.com) • [generalmail@mamotorworks.com](mailto:generalmail@mamotorworks.com)**

©Mid America Motorworks, Inc. All rights reserved.



## Description (cont.)

### STEP 6.




Once you are comfortable with the positioning of the cushion to the lid, replace the latch/spring assembly, making sure it moves in and out properly. Replace the backing plate on the lid, using the 7 screws you removed earlier (Illustration G).

### STEP 7.

Plug the two parts of the light connector back together and push wires and connector down into the compartment. Replace the cover for the connector by snapping it back in place.

### STEP 8.

With Console Cushion installed, reinstall the console lid to the hinge assembly. Make sure the lid latches properly.

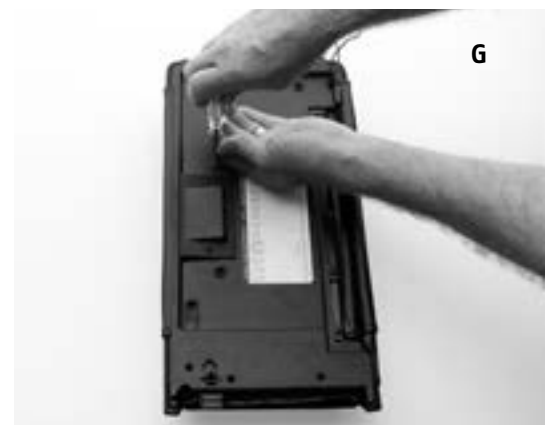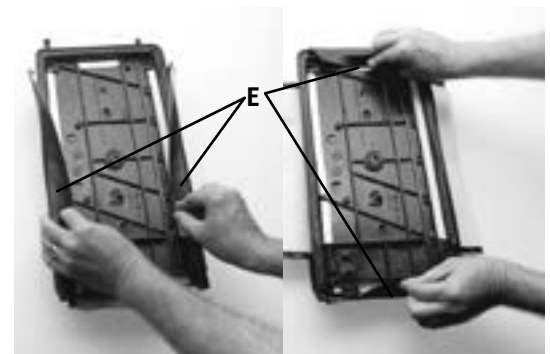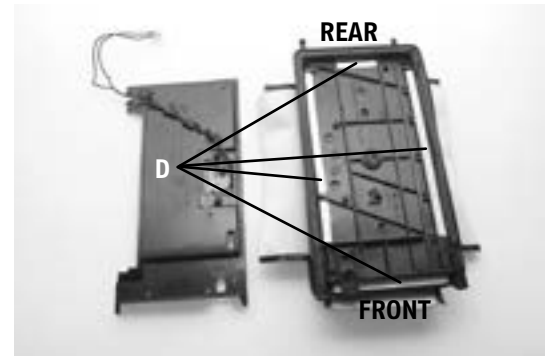

**NOTE: FLAP ON HINGE SIDE DOES NOT COVER HINGE SCREWS.**