



Application: 1984-1990

Part Includes

1 - Front Mask

Front Mask



Tools Needed



Search: **Vehicle Protection**
www.mamotorworks.com

PREPARATION:

Vehicle surface must be clean, dry and free of dirt and debris, especially in the wheel well area and in the grill area. Make sure the front of the car has a good coat of wax before installing Mask. Allow wax to cure a day before installing Mask to allow any moisture to evaporate. Place Mask in direct sunlight to allow the material to stretch more easily during installation. Ideal temperature is about 80 degrees for proper stretch. A hair dryer may be used to warm up specific sections for the best initial fit.

Do Not install on fresh paint. Paint must be allowed to cure. If your Corvette has been painted recently, please consult paint shop to find drying/curing time necessary.

HARDWARE INSTALLATION:

Note: Perform 72 hours prior to Mask Installation

STEP 1.

Always start with a cool engine to prevent injury.

STEP 2.

Open hood. Using cleaner (or alcohol) and towel, clean the underhood lip to remove grease or dirt that can prevent adhesion of Velcro strips. Make sure that this area is clean and dry prior to Velcro installation.

STEP 3.

Measure the spaces between the bolt heads in the underhood lip. Measure and cut Velcro strips to fit in the spaces between the bolt heads. The center section in the middle of the nose area usually measures 2.5". The other sections will be approximately 5" - 6". Press the strips firmly in place. **See Photo 1.**

Note: For maximum adhesion, Velcro adhesive strips should be allowed to cure for 72 hours before Mask installation.

STEP 4.

With hood open, clean the under hood edge above the side marker lights to remove grease or dirt that can prevent adhesion of Velcro strips. Make sure this area is clean and dry before installing Velcro. Measure spaces between the bolt heads on the under hood ledge above the side marker light. Measure and cut Velcro strips to fit in the spaces between the bolt heads. The sections will be approximately 2", cut to fit. Press those strips firmly into place. **See Photo 2.**

STEP 5.

Grommet anchor installation. For easy installation, turn wheels to allow access to front of wheel well when working on driver's side or when working on the passenger side.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.



Description (cont.)

STEP 6.

With the #30 Torx tool, remove the 4 bolts at the front of the inner wheel well. Hold the Mask side portion with the grommets to locate correct bolts, if in doubt. Put the bolts through the grommet anchors and re-install in the holes. Position the anchor points so they are facing in, toward the engine bay. Re-tighten bolts. Repeat on opposite side. **See Photo 3.**

MASK INSTALLATION:

STEP 1.

Position Mask. Pick up the Mask at its center with the black side facing you and the Velcro at the top. Lay Mask on nose of car, center and press down just enough Velcro to hold Mask in place.

STEP 2.

Move to side of car and pull one side of the Mask around to the front of the wheel well. Hook grommets over grommet anchors in the wheel well. Move around front of car, release Velcro and hook opposite side grommets over anchors.

STEP 3.

Reposition Mask as needed to straighten upper seam. Attach Velcro with seam inside of hood edge, so that your hood will close properly. **See Photo 4.**

STEP 4.

With upper Velcro firmly pressed down, hook bungee cords through lower Mask edge grommets. Stretch bungees toward rear of car and attach to bracket or lip behind front bumper.

STEP 5.

Installation is now complete. To remove any possible wrinkles, start from center and re-adjust Velcro hold down strip on Mask.

STEP 6.

After Mask has been in place a few days, it may stretch slightly and require slight adjustments to remove slack.

MASK MAINTENANCE:

- Do not leave a wet Mask on your car. If it gets wet from rain, remove and allow to dry before re-installing.
- Remove Mask when you wash your car. Dry car thoroughly before re-installing.
- Do not drive with a loose or flapping Mask. Stop and adjust to prevent damage.
- Clean under Mask on a regular basis to remove dust, grit and road debris that can damage paint.
- Clean Mask with mild, car wash soap and warm water.
- Avoid use of protectants and/or preservatives that may clog pores of vinyl and prevent proper wicking away of trapped moisture.



PHOTO 1



PHOTO 2



PHOTO 3

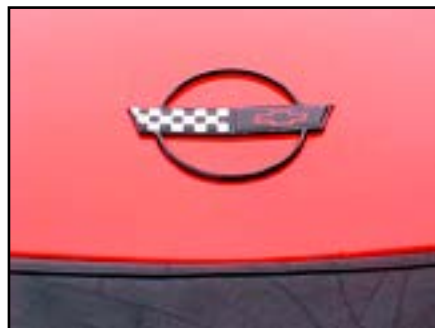


PHOTO 4



Description (cont.)

STEP 5.

Installation is now complete. To remove any possible wrinkles, start from center and re-adjust Velcro hold down strip on Mask.

STEP 6.

After Mask has been in place a few days, it may stretch slightly and require slight adjustments to remove slack.

MASK MAINTENANCE:

- Do not leave a wet Mask on your car. If it gets wet from rain, remove and allow to dry before re-installing.
- Remove Mask when you wash your car. Dry car thoroughly before re-installing.
- Do not drive with a loose or flapping Mask. Stop and adjust to prevent damage.
- Clean under Mask on a regular basis to remove dust, grit and road debris that can damage paint.
- Clean Mask with mild, car wash soap and warm water.
- Avoid use of protectants and/or preservatives that may clog pores of vinyl and prevent proper wicking away of trapped moisture.