



Application: Corvette 1985-1996



Search: **Door Components**
www.mamotorworks.com


Part Includes

1 - Wind Deflectors

Wind Deflectors



Tools Needed

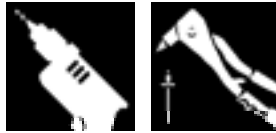

IMPORTANT: Due to assembly line production, there is the possibility of mirror fit variances. Before installing your wind deflectors, check the clearance gap between the top edge of the wind deflector and where it touches the windshield pillar, carefully close the door to check the gap. If the wind deflector is too wide, it can be trimmed to fit using a file, belt sander or planer.

THERE ARE TWO OPTIONS FOR INSTALLING YOUR WIND DEFLECTORS:

DOUBLE STICK TAPE METHOD (no-modification mount):

STEP 1.

Clean all dirt, grease and wax from inboard side of mirror.

STEP 2.

Using double-sided tape pieces provided, peel away backing paper and press onto wind deflector.

STEP 3

Position wind deflector onto mirror, peel remaining backing paper off and mount wind deflector to mirror.\

STEP 4.

Repeat this process for both mirrors.

POP RIVET MOUNT (requires drilling):

STEP 1.

For a permanent installation, hold wind deflector in position against the mirror and mark the location of holes onto the mirror casing. (HELPFUL HINT: after drilling, before riveting, apply the double-sided tape included for added protection and prevention of future rattling.)

STEP 2.

Drill necessary holes and install wind deflector to mirror using pop rivets. Repeat this process for both mirrors.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401

800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800

www.mamotorworks.com • generalmail@mamotorworks.com

©Mid America Motorworks, Inc. All rights reserved.