



Application: Corvette 1997-2004

Part Includes

- 1 - Pair of Door Moldings
- 1 - Pair of Fender Cove Moldings

Door Molding



Tools Needed



Search: **Body Trim, Bumpers & Grilles**
www.mamotorworks.com

STEP 1.

Clean the surface area of the door where the molding is to be applied with 3M® General Purpose Adhesive Cleaner, or equivalent.


STEP 2.

Preheat the adhesive portion of the door molding and the mounting area of the door to between 32°-38° C (90°-100° F).

STEP 3.

Using a flexible tape measure, locate and mark, with masking tape, the mounting position of the molding.

- a. The distance between the forward upper edge of the fender down to the top of the molding is 335 mm (13.2 in).
- b. The distance between the bottom of the door handle key hold opening down to the top of the molding is 195 mm (7.8 in).
- c. The front edge of the molding is positioned 5 mm (0.2 in) rearward of the front edge of the door.

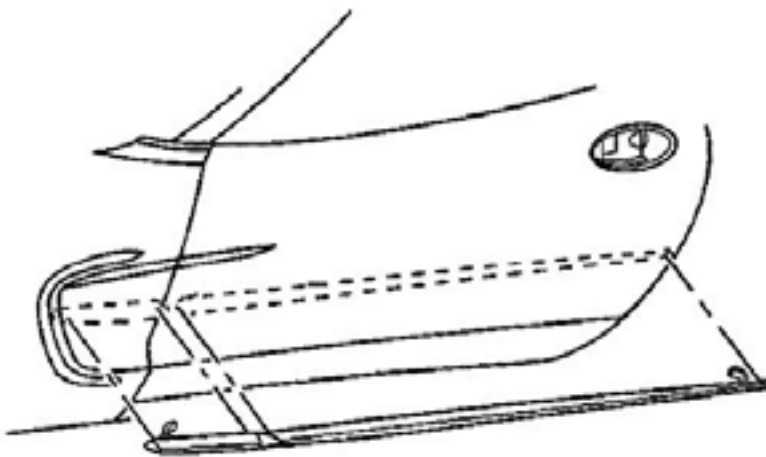

STEP 4.

Peel the protective liner paper from the adhesive on the new molding.

STEP 5.

Align the molding to the door and press using a hand roller to press out the entire length of the door molding.



Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800
www.mamotorworks.com • generalmail@mamotorworks.com
©Mid America Motorworks, Inc. All rights reserved.