



**Application:** 2014-2019 Corvettes, Stingrays, Grand Sports, Z06s & ZR1s

## C7 LED Footwell Kit



### Tools Needed



Search: *Lighting, Exterior & Interior*  
[www.mamotorworks.com](http://www.mamotorworks.com)


**Step 1:** Using a forked panel removal tool remove the 2 plastic retainers holding the footwell panels in place.



**Step 2:** Remove the factory light by turning it counter clockwise to unlatch it.



**Step 3:** The easiest way to disconnect the lamp us by using a pointed object to depress the latch at the red arrow and push it out to disconnect it.

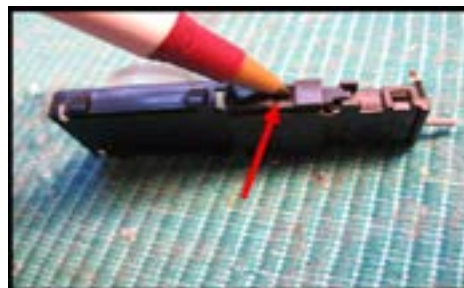

Mamotorworks



@CorvettePassion



MidAmericaMotorworks



CorvettePassion

2900 North Third Street, Effingham, IL 62401  
800.500.1500 • Worldwide: 217.540.4200 • FAX: 217.540.4800  
[www.mamotorworks.com](http://www.mamotorworks.com) • [generalmail@mamotorworks.com](mailto:generalmail@mamotorworks.com)  
©Mid America Motorworks, Inc. All rights reserved.



## Description (cont.)

**Step 4:** Now simply plug in the led strip. It will only plug in in the Proper position.

Make sure to use the supplied adhesion promotor when installing the strips. Cut off the top of the packet and squeeze the excess fluid back into the packet. Apply a thin coat to the mounting area and let dry a couple minutes. Apply strips within 1hour.



**Step 5:** Re-install the panel and wipe the mounting area with the alcohol pads. Let dry. Cut the very top off the adhesion promotor pack. As you pull the sponge out of the packet, squeeze all excess fluid back into the packet for use in other kits you may have purchased. Spread a thin amount onto the mounting area. Fold and seal the packet to preserve the fluid. Apply the leds within 1 hr. This shows the drivers side. Peel the backing and attach the led strip. Press the strip in place for a minute or two. Tuck the wires out of sight.



**Step 6:** This shows the best lighting position on the passenger side. Replace the panel, wipe the mounting area with alcohol pads and let dry. Prep with adhesion promoter. Peel the backing and place the strip over the plastic retainers. There will be areas where the strip doesn't contact the panel but will still stay in place. You can now put those factory lights away, you wont need them anymore!

